

Zyxel 2306 Wifi Setup

NOTE: By default your wireless is on, the wireless name and password are on a sticker on the bottom of the Zyxel router. If you would like to change the name of your wireless network or password, follow the instructions below. Please call Tech Support for further assistance.

STEP 1:

- Open Browser (Fire Fox, Safari, Internet Explorer, etc.)
- Empty Address Bar
- Enter: **192.168.1.1**
- Press **ENTER**



STEP 2:

- Username: **admin**
- Password: **1234**
- Select **Login**



STEP 3:

- Select **Ignore**




STEP 4:

- Click on the **Sprocket**
- Select **Network**



STEP 5:

- SSID Wireless Name:
- Wireless Network Name**
- Choose **Security Mode**
- Enter **New Password**
- Select **Apply**

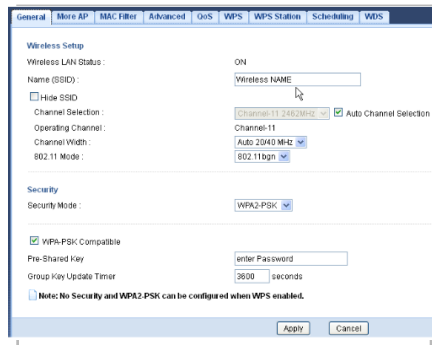

Congratulations—you're done!