 


Zyxel 2881 Wifi Setup

NOTE: By default your wireless is on, the wireless name and Password are on a sticker on the bottom of the Zyxel router. If you would like to change the name of your wireless or password follow the instructions below or you can call tech support for help

STEP 1

- Open Browser (Fire Fox,Safari, Internet Explorer, etc.)
- Empty Address Bar
- Enter: **192.168.1.1**
- Press **ENTER**



STEP 2:

Username: **admin**
Password: **newinstall1**
Click **Login**



EMG2881-T20A
Model: EMG2881-T20A


Username :

Password :

Login


STEP 3:

- Click on the **Sprocket** in the left menu bar
- Choose **Wireless**

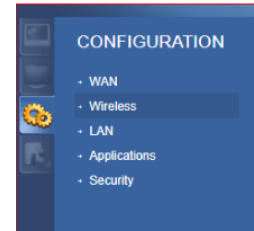

STEP 4:

- Choose **Wireless** again

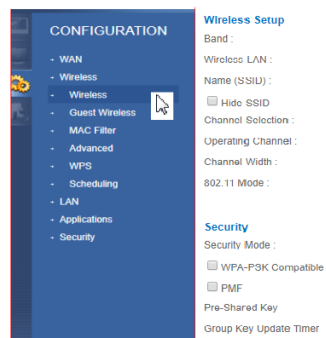

CONFIGURATION

- WAN
- Wireless
 - Wireless
 - Guest Wireless
 - MAC Filter
 - Advanced
 - WPS
 - Scheduling
- LAN
- Applications
- Security

Wireless Setup

Band :

Wireless LAN :

Name (SSID) :

Hide SSID

Channel Selection :

Operating Channel :

Channel Width :

802.11 Mode :

Security


Security Mode :

WPA-PSK Compatible

PMF

Pre-Shared Key

Group Key Update Timer

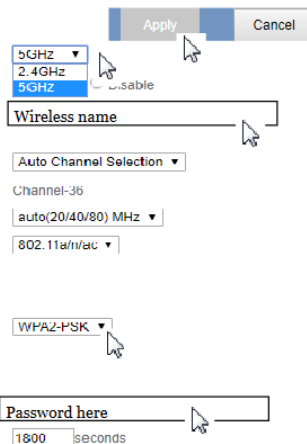

Apply Cancel

5GHz
2.4GHz
5GHz

Wireless name

Auto Channel Selection

Channel-35

auto(20/40/80) MHz

802.11a/n/ac

WPA2-PSK

Password here

1800 seconds

STEP 5:

- Choose bandwidth band **2.4Ghz** or **5Ghz**
- Name (SSID): Enter **WiFi Name**
(if using same name for 2.4 and 5, it is suggested you a 5 behind the name for 5Ghz)
- Choose **Security Mode**
(if using 5Ghz don't use WPA-psk)
- Enter **Password**
- Click **Apply** (top right hand corner)
- Repeat for other Ghz

Congratulations—you're done!